




Powering Lives,
Empowering
Communities
www.solslife.com

Mini Solar Breeze - J1 User Manual

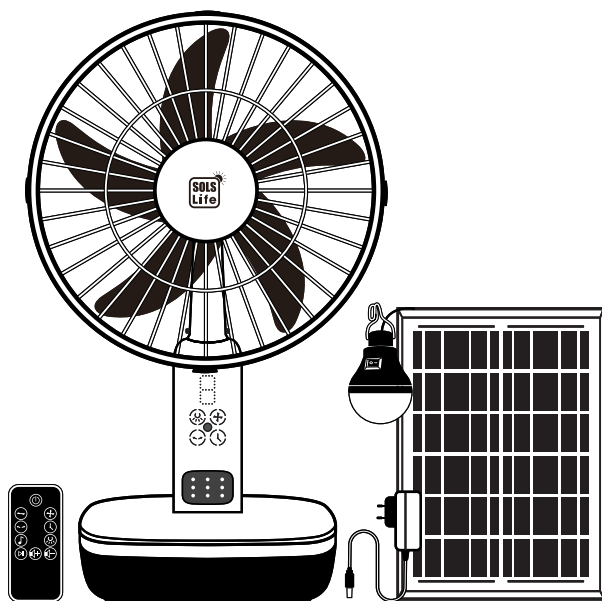


What's in the Box

Solar Table Fan; 20W Solar Panel; AC Adaptor;
3W LED Bulbs; Remote Control

01


INSTALLATION INSTRUCTIONS

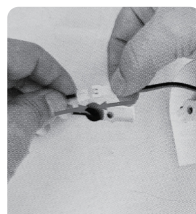


Connect the
power cord



Install fan
base.

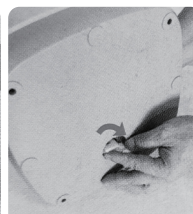


Tighten the fan
base screw.

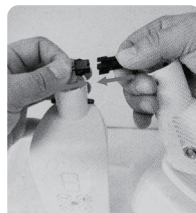

Connect the wires
of the fan head
and the body.




Install the fan
head on the
body.

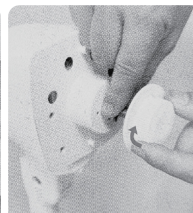


Disassemble
the fan
blades nut




Align with the
mounting holes,
install, and tighten.

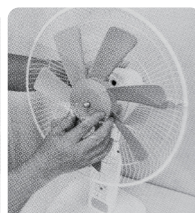


Install fan
blades.

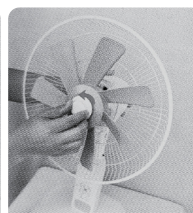

Install the fan
blade nuts
counter-clockwise.

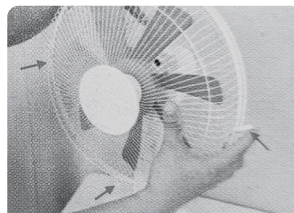

Install the front net cover
and fasten the retaining
buckle.

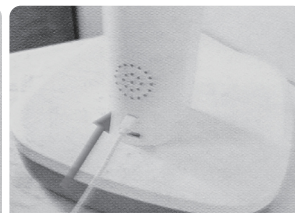

Connect the power supply
/ solar panel to charge the
battery if the power is low

02

SPECIFICATION

Accessories	Information
Battery	39.96Wh lithium
Solar panel	20W polysilicon + 5m cable
Charging voltage	110-240V 50/60Hz/DC
Motor	Brushed motor
Gear	6 gears
Light source	3W LED bulb
AC adapter	30W
Function	Night light USB output Type-C input Remote control adjustment 0.5H timer AC/DC charge

03

WORKING TIME



5 hours

High speed




10 hours

Medium speed





20 hours

Low speed

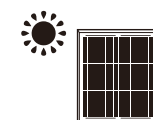


3-4 hours

Solar charging (under sufficient sunshine)

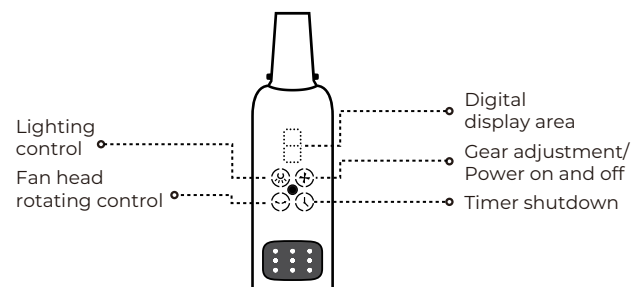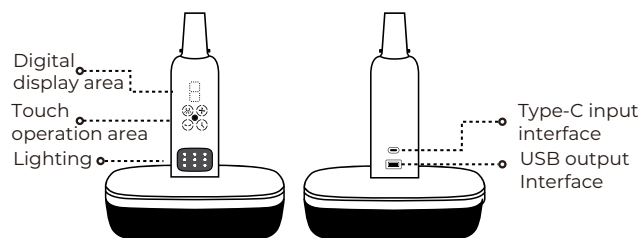

Touch button instruction

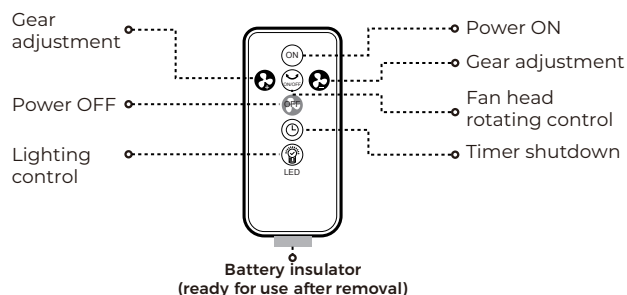

Remote control button description

Power on and off settings

Press the fan button (⏻) or the corresponding button (⏻) on the remote control. The fan will start operating at speed level 6 by default.

When the fan is operating, press and hold the fan button or (⏻) the corresponding button (⏻) on the remote control. The fan will stop.

Gear adjustment

Press the speed button (⚙️) on the control panel or remote (⚙️) control to adjust the wind speed. Each press will cycle through the following modes:

1, 2, 3, 4, 5, 6,

The selected mode will be displayed on the digital display.

Fan head control settings (remove control settings)

Press the (⏻) button on the fan or remote control to turn the oscillation function on or off. To adjust the airflow direction vertically, gently tilt the fan head upward or downward by hand.

Timer shutdown setting

Press the timer button (⌚) on the fan or remote control to set the automatic shutdown time.

Each press cycles through the following timer options:

1, 2, 3, 4, 5, 6, and 0 hours (0 = timer off).

The selected time will be displayed on the digital screen.

Lighting control setting

Press the light control button (💡) on the fan or remote control to adjust the brightness level.

Each press cycles through:

Level 1 → Level 2 → Level 3 → Off.

The selected brightness level will be shown on the digital display.

Fan charging settings

After each operation, the display will show the current battery level:

Three indicator bars flashing: Battery level above 80%.

Two indicator bars flashing: Battery level above 20%.

One indicator bar flashing: Battery level below 20%.

Phone charging settings

Insert a mobile phone charging cable into the USB port located at the rear of the fan to charge your phone. Output voltage is 5V.

Movement

⚠ When moving, be sure to stop the console and unplug it.

⚠ Hold the fan pillar firmly to avoid falling and injuring people.

Installation

⚠ Be sure to install this product correctly according to the instructions. Otherwise, electric shock, fire, personal injury, or other damage may occur.

⚠ If the fan is not assembled, do not turn it on.

During use

⚠ If the product has abnormal noise, odor, high temperature, inconsistent fan rotation frequency, etc., please stop using it immediately.

⚠ Do not lean on the fan and do not tilt the fan during operation.

⚠ Do not manually swing the machine head repeatedly, as this may damage the internal transmission mechanism.

Power cord

⚠ Before performing maintenance work or moving the fan, disconnect the power adapter from the AC outlet.

⚠ When disconnecting the power adapter, do not pull on the power cord.

⚠ If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a qualified technician to avoid hazards.

Improper use may result in electric shock, fire, personal injury, or other damages.

⚠ Do not use this product near objects that are unstable or prone to tipping.

⚠ Do not use this product in hot or humid environments, such as bathrooms.

⚠ Do not use this product if the power cord is damaged or the power plug is loose.

⚠ Do not operate this product if the front grille is not installed or if the rear grille is loose or detached.

⚠ Do not allow children or adults who do not understand this instruction manual to operate this product.

⚠ Do not disassemble or repair this product without authorization.

⚠ Do not excessively twist, bend, or pull the AC power cord, as this may expose or damage the internal wires.

⚠ Do not insert fingers or foreign objects into the front grille, rear grille, or moving fan blades.

⚠ Do not place hair, fabrics, or other objects near the fan, as they may become entangled and cause injury.

⚠ Do not use an improper or incompatible AC outlet.

⚠ Do not use the power adapter provided with this product for any other device.