 


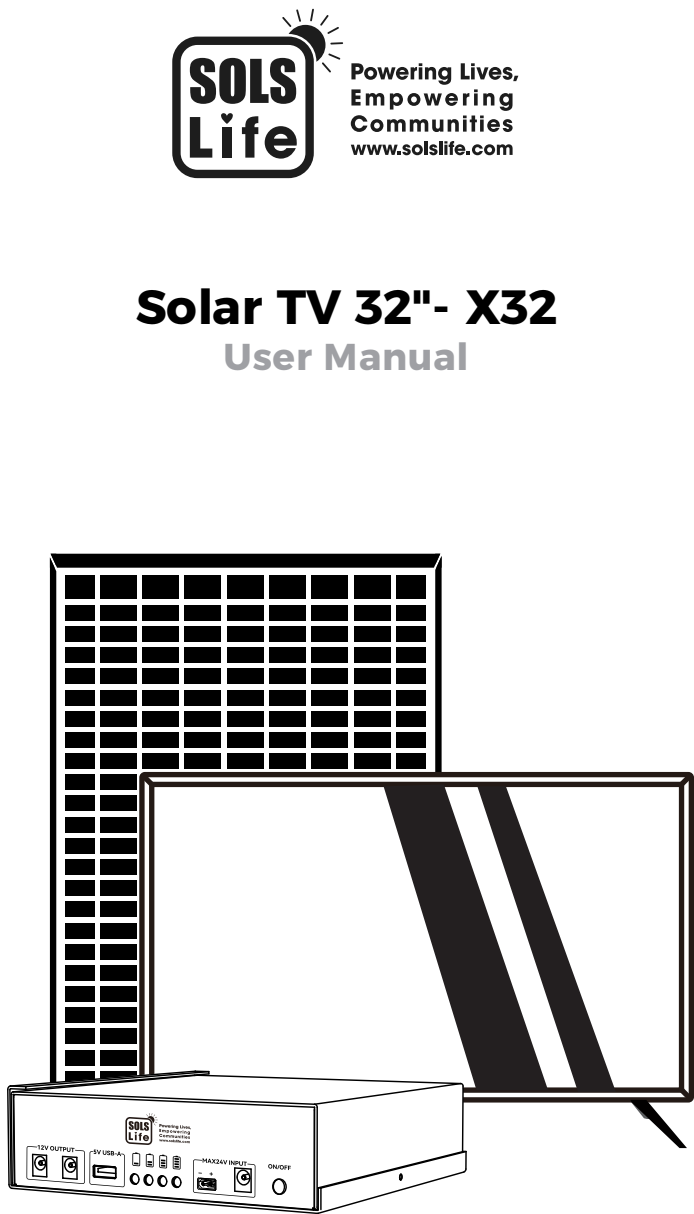

What's in the Box
Battery box x1, AC Adapter x1, TV x1



Solar TV 32"- X32 User Manual

01 Specification:

TV	
Item	Information
Resolution	32-inch:1366*768 HD 46-inch:1920*1080 FHD
Width to height ratio	16:9
Brightness	180-200 units
Power supply	AC110-240V 50-60Hz
Response time	6MS
Analog Signal	PAL/NTSC/SECAM
Interface	HDMI x1, USB x2, ATV/AV, VGA x1


Battery box	
Item	Information
Battery	12.8V/15Ah LFP
Input	XT30 x1, DC5521 x1, 100W max
Output	DC5521 x2, 12V/3A
USB	5V/2A
Charging Method	AC Adapter/Solar panel

Welcome
Congratulations! You now own one of the most state-of-the-art and technologically advanced high-definition television products available. To make setup as easy as possible, we would like to familiarize you with the features and functions of this product. Please read this user manual carefully and keep it in a safe place for future reference.

- Safety Instructions**
- Do not place the TV on an unstable surface where it may fall.
 - Do not expose the TV to extreme temperatures or moisture.
 - Avoid placing the TV in direct sunlight or near heat sources.
 - Do not allow liquids to enter the TV.
 - Do not place objects containing liquids (such as vases) on or near the TV.
 - During thunderstorms, especially when there is lightning, unplug the power cord and antenna (aerial).
 - Do not step on, pull, or twist the power cord.
 - Do not overload wall outlets with too many devices, as this may cause fire or electric shock.
 - Clean the TV with a soft, dry cloth. Do not use volatile substances or solvents.
 - If the TV is damaged, do not attempt to repair it yourself. Contact a qualified service technician.
 - Remove the batteries and store them in a dry place if the remote control will not be used for a long period.
 - Do not drop the remote control.
 - Do not place overheated parts of the TV directly on the floor or carpet during operation or display, as this may cause fire.
 - Ensure the TV is properly installed (e.g., wall-mounted or ceiling-mounted)

- according to professional instructions. Do not place the TV face-up or upright on the floor during use or display.
- Keep the TV away from dripping or splashing water and from containers filled with water (such as flower vases).
 - The TV can operate continuously; however, if it will not be used for an extended period, unplug the power cord.

 Sometimes, the LED screen may display tiny red, blue, white, or black spots. This is normal and does not affect performance.

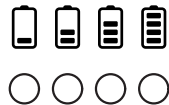

- ♦ To reduce the risk of electric shock, do not remove the cover (or back). There are no user-serviceable parts inside. Refer servicing to qualified service personnel.
- ♦ This symbol indicates a potentially hazardous situation which, if not avoided, could result in damage to the equipment or other property.



- ♦ This symbol indicates the presence of dangerous voltage inside the TV that may pose a risk of electric shock or personal injury. It signifies a hazardous situation which, if not avoided, could result in serious injury.

 


- ♦ This symbol indicates important instructions accompanying the TV.



02 Supplied Accessories

- ♦ Please check the supplied accessories before installation.
- ♦ In case of missing or damaged, please contact the dealer immediately.

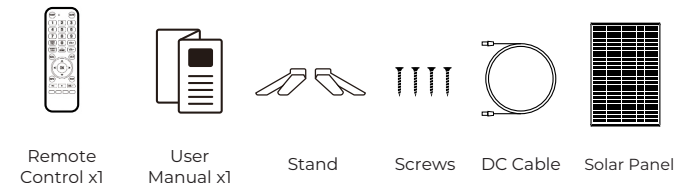

- The type of power plug provided may differ from the illustration shown, depending on the country.
- Please store any unused screws in a safe place.

03 Connecting and Preparing Your TV

Remote Control Map (Optional)



POWER
Press to turn the TV on or off.

AUTO
Press to automatically adjust the PC source.

MUTE
Press to mute the sound. Press again to restore the sound.

0-9
Press any number from 0-9 to select a TV channel. Supports the RECALL function; press the previous channel number to return to the last channel.

VOL + / -
Press to increase or decrease the volume.

CH + / -
Press to select the next or previous channel.

ASPECT
Press to select the aspect ratio.

MENU
Press to display the menu.

INPUT
Press to display the signal source selection.

INFO
Press to display source and channel information.

P.MODE
Press to select the picture mode.

S.MODE
Press to select the sound mode.

ZOOM
Press to adjust the image scale.

 
HOME
Press to return to the TV home page.

The remote control design and functions may vary by TV model.

Installing Batteries

- 1 Open the battery compartment cover on the back of the remote control.
- 2 Insert two 1.5 V AAA batteries, ensuring correct polarity. Do not mix old and new batteries.
- 3 Close the battery compartment cover.

Warning:
Batteries (battery pack or installed batteries) must not be exposed to excessive heat, such as sunlight, fire, or similar sources.

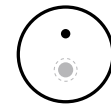

Using the Remote Control

Point the remote control towards the TV' s remote sensor and operate it within a distance of 7 metres.

Dispose of used batteries in a recycling bin, as they may negatively affect the environment.

Bright sunlight or strong lighting may cause erratic remote control operation.

03 Viewing the Control Panel

Note: The product colour and shape may vary depending on the model.

VOL + / VOL – Button
Press to increase or decrease the volume. Also used to select items on the on-screen menu.

CH + / CH – Button
Press to change channels. Also used to highlight items on the on-screen menu.

 
MENU Button
Press to open the TV’ s on-screen menu.

SOURCE Button
Press to display the available input sources (TV, Video, S-Video, PC). Use the SOURCE button on the TV or remote control to make selections.

POWER Button
Press to turn the TV on or off.


Remote Sensor
Receives signals from the remote control.

Power Indicator
Indicates the TV’ s operating status.
Blue light: TV is on
Red light: TV is in standby mode

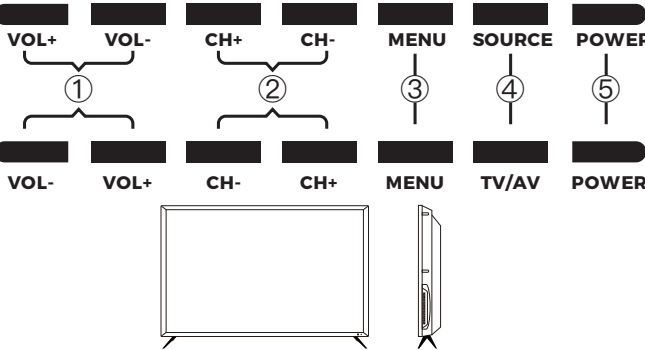

04 TV installation

 
External Wiring Connection

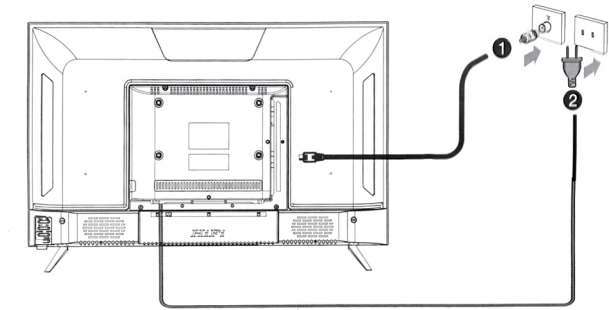

- 1 Connect the antenna cable to the antenna input terminal on the rear panel and to the wall antenna socket.
- 2 Connect the power plug to the wall outlet.

Note: If the illustration differs from the actual product, the physical port on the device shall prevail.

 Foot Mounting

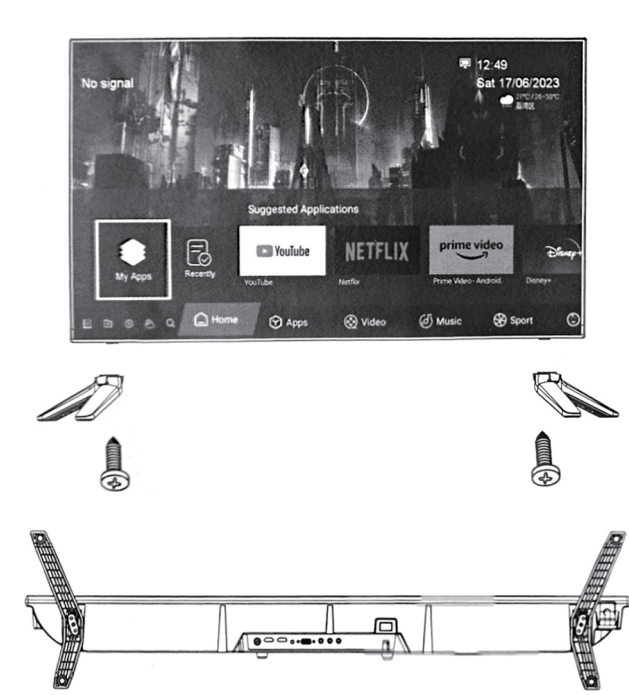


- Appearance after the base is installed
- Attention:
Align the holes correctly during installation. When tightening screws, apply appropriate force and do not overtighten.

Installing the Extended Battery Pack


♦TV Rear Mounting (battery)

- 1) Secure the battery bracket to the back of the TV using screws.
- 2) Insert the battery and secure it firmly in place at the rear.

 Wire connection

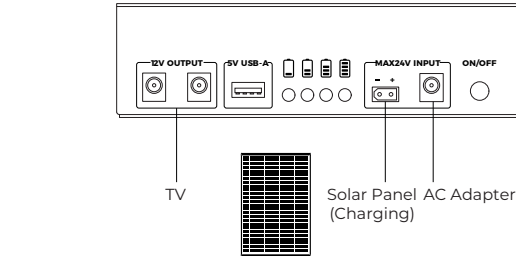


Wall-Mounted Bracket Installation

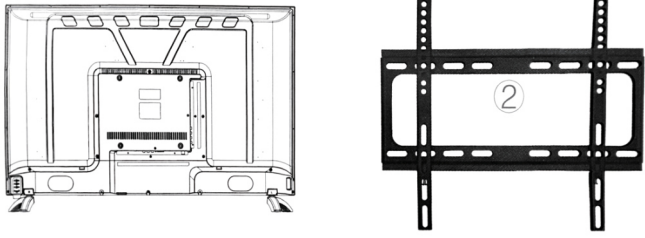 

- 1 Install the vertical frame onto the TV.
 - 2 Install the square mounting bracket onto the wall.
- Note: Wall mounted bracket is not included in the standard package.

 
Installation steps

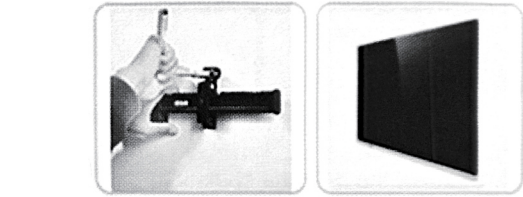

04 TV Signal Source Selection


1 TV Home Page:

 Press the HOME button on the remote control to enter the TV home page, where you can access applications, TV settings, and signal source settings.

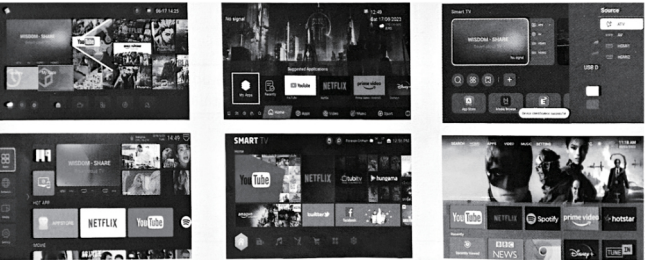

•Note:
The interface shown is the standard Android home page. Actual interface may vary depending on purchase.

 2. Signal Source Selection:

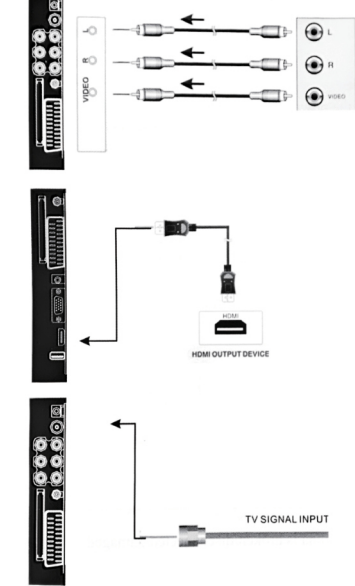

When connecting a digital set-top box, computer, or other TV signal source:

Press the SOURCE button on the remote control.
Select the corresponding input channel.
External signal schematic diagram: (As shown).

Note:
If the illustration differs from the physical product, the physical port on the device shall prevail.

05 Troubleshooting

Before contacting customer support, please follow the troubleshooting steps below. Turn off the device and unplug the power plug if you suspect a malfunction. Do not attempt to repair the device yourself.

Problem	Possible Solution
No picture	Check that the power is plugged in. Check that the power switch is set to the “On” position.
No sound	Check that the volume is not muted or set too low.
Noise sound	Move devices that generate interference away from the television.
Remote control not working	Check that the batteries are working correctly. Check if anything is blocking the remote sensor.
No TV Signal	Check that the antenna is connected. Check that the TV/AV input is set correctly.
Picture too light or dark	Adjust colour, brightness, and contrast settings.
Loss of colour / snow / ghost images	Check that the antenna is properly connected and not damaged.
Poor reception	Adjust the fine-tuning settings.
Stripes on picture	Check for interference from other broadcasting sources.

 If you plan to dispose of this product in the future, please do not dispose of it with household waste. Waste electrical products should be recycled using appropriate facilities. Please check with your local authority or retailer for recycling advice in accordance with the Waste Electrical and Electronic Equipment (WEEE) Directive.